

# EVO 200D



## BUILT TO LAST

IT'S ROBUST AND RELIABLE

Designed and built in Denmark; the SMART EVO systems are comprised of the best components and assembled with the utmost care - making them reliable, long lasting and a sound investment. They are fitted with a high quality metal ceramic X-ray tube and the robust composite casing now protects all vital parts even better. The systems meet the IP65 standard, making them fully operational in dusty and wet conditions.

## SMARTER WORKFLOW

IT'S LIGHT-WEIGHT AND EASY TO HANDLE

The ergonomic design and the low weight of 23 kg make the SMART EVO 200D easy to handle and re-position. A broad temperature range from  $-20^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  makes the EVO systems reliable and ensures smooth operation even in extreme environments. The intuitive interface allows for a smarter workflow.

## HIGH PERFORMANCE

DUE TO IT'S TECHNICAL CAPABILITIES

Built to meet the highest international safety standards, each unit is individually tested and measured for safety and accuracy. The SMART EVO 200D features a 1.0 mm focal spot and 750 W constant potential X-ray power ensuring high performance, shorter exposure times and high resolution results.

# EVO 200D



## EXPOSURE CALCULATOR

The advanced built-in exposure calculator in the CONTROL EVO ensures fast exposures calculations, as well as uniform results and optimised exposure times. It accommodates the use of a wide range of films, materials and settings.

## POWER SUPPLY

The AC-mains voltage range spans from 85 to 264 VAC and from 45 to 65 Hz, supporting global operation. The improved power factor correction module ensures stable operation, where AC-mains are unstable.

## OPTIONS

The right set of accessories is important to make your workflow even smarter. Tube stands and other accessories are available, making the X-ray systems versatile, flexible and suited for most applications.

## CERTIFICATES

CE (Low voltage EN 61010-1, EMC 2004/108/EC, Machinery EN 60204-1). DIN 54113 and Röntgenverordnung (RöV).


# YXLON

Technology with Passion

YXLON International A/S  
a company of the COMET Group  
Helgeshøj Alle 38, 2630 Taastrup, Denmark  
T +45 72 40 77 00, VAT DK 18 21 52 33  
yxlon@cph.yxlon.com, www.yxlon-portables.com

## Fe EXPOSURE DIAGRAM

700 mm FFD / D7-type + Pb / D = 2,0

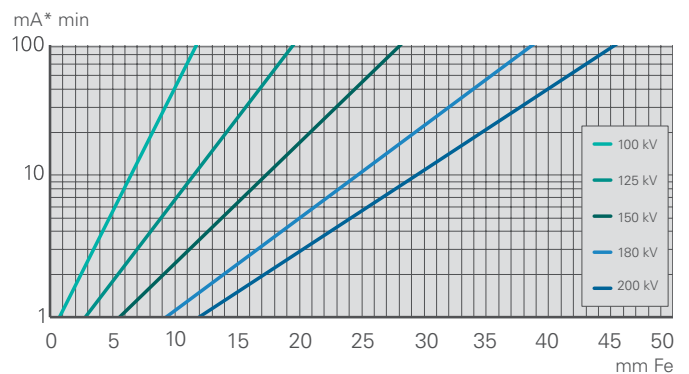

## SPECIFICATIONS

WEIGHT	23 kg
HEIGHT	635 mm
FOCAL SPOT SIZE EN 12543	1.0 mm
HIGH VOLTAGE ADJUSTMENT	30 – 200 kV
mA ADJUSTMENT	0.5 – 6.0 mA
MAX X-RAY POWER	750 W
BEAM ANGLE	40° x 60°
LEAKAGE RADIATION	Max. 2.0 mSv/h
ENVIRONMENT	IP65
TEMPERATURE RANGE	-20°C to +50°C
CONT. EXPOSURE 35°C, 200 kV / 3.7 mA	Min. 1 hour



YXLON is proudly represented in Australia and New Zealand by AXT Pty. Ltd.  
1/3 Vuko Pl., Warriewood  
NSW 2102 Australia  
T. +61 (0)2 9450 1359 F. +61 (0)2 9450 1365  
W. www.axt.com.au E. info@axt.com.au